



## PROGRAM REMOTE

- » Turn TV on manually or using original TV remote
- » Press and hold SELECT & MUTE for three seconds until the green light at the top of remote blinks twice
- » Using the number keys, enter the first digit of the first code listed
- » Wait for the green light at the top of the remote to blink twice
- » Enter in the rest of the code
- » Aim the remote at your TV and use the VOL toggle to change volume level. If programmed successfully, the volume will change
- » If unsuccessful, try programming your remote with subsequent code

### IF TV BRAND IS NOT LISTED

- » Visit the following website:

[directv.com/DTVAPP/content/remote\\_codes2](https://directv.com/DTVAPP/content/remote_codes2)

- » Select RC-71 for remote type
- » Follow on-screen prompts to receive codes associated with your TV

#### SAMSUNG

10702  
10650  
10178  
10060  
10766  
10814  
11060  
11235  
11267  
11903  
11959  
12596  
12733  
12814

#### INSIGNIA

12049  
11423  
11564  
10171  
10463  
12751  
12432  
12417  
12184  
12088  
12002  
11963  
11892  
11660  
11641  
11517  
11385  
11326  
11204

#### LG

11423  
12358  
12731  
12424  
12834  
10178  
10017  
11265  
10700  
12612  
12864  
13941

#### RCA

11447  
12434  
12746  
12932  
12187  
10093  
10047  
10051  
11661  
13938  
13717  
13577  
13382  
13147  
12855  
12183  
12002  
11959  
11958  
11917  
11868  
11781  
11547  
11385  
11347  
10679  
10090

#### PANASONIC

11480  
10250  
11291  
12264  
10650  
10051  
11271  
11924  
11927  
11941  
11946  
11947  
12240  
12654

#### SANYO

11142  
10054  
10154  
10088  
11362

#### SCEPTRE

10878  
11217  
11360  
11599  
12337  
12506  
12528

#### SONY

11300  
11317  
11685  
11786  
11791  
11904  
12736

#### PHILLIPS

11867  
11454  
11455  
11744  
12597  
12372  
11394  
10054  
10171  
13565  
13292  
12740  
12665  
12652  
12492  
11990  
11961  
11944  
11856  
11483  
11365  
11154  
11054  
11012  
10230

#### VIZIO

11758  
13758  
12757  
10864  
11756  
10885

#### SHARP

12360  
10818  
10093  
11393  
11917  
12402  
13867

#### WESTINGHOUSE

11712  
13470  
13579  
12397  
10451  
13949  
13908  
13382  
13094  
12499  
12293  
12195  
11577  
11300  
11282  
11217  
10890  
10885

#### TOSHIBA

11524  
11656  
10156  
11156  
11256  
11936  
12006  
10650  
10060  
10154  
11265  
11369  
11343  
11704  
11916  
11935  
11945  
11959  
12667  
12684



## PROGRAM REMOTE

- » See back page for remote control programming steps

## NAVIGATE TO A CHANNEL

### USING GUIDE

- » Press **GUIDE**
- » Use **UP** and **DOWN** arrows to find desired channel
- » Press **SELECT**

### USING CHANNEL TOGGLE

- » Use the **CH** toggle to move up or down through individual channels

### ENTERING CHANNEL NUMBER

- » Enter desired channel number (Ex: 202)
- » Once numbers have been entered, the TV will automatically change to the entered channel

## REMOTE LAYOUT



\*Functions only with DVR receivers

## My TV doesn't show a picture:

- Ensure that both the TV and the DIRECTV receiver are powered on.
- Locate the original remote that came with the TV. If you can't find the original remote, look for buttons on the TV.
  - Locate the button called "**Input**" or "**Source**" or "**A/V**" or "**Video**" (The name of the button varies by the TV brand)
- Press on the button found on your remote Press this button. Depending on your TV, it may cycle through available inputs or display a menu with a choice of inputs.
  - If pressing the button brings up a new input, press this button slowly until the correct Input is found and the picture is displayed. Your desired input is almost always HDMI or Component
  - If pressing the button brings up a menu of the available inputs, use the arrows to select the input you want. Then press on OK / Select to confirm your input's choice.
- You should now see a picture on your screen.
- If nothing shows up on the screen, you may want to verify on the back of the TV that the cables are connected properly.
- You are looking for a HDMI, Coax cable, Component, Composite or RCA cable that is snug into the correct slot.
- Trace the cable to the DIRECTV source. Either, a DIRECTV receiver or directly to a wall plate.
- If the receiver has power you may have a bad receiver, or cable that is hooked up to the TV or bad port on the TV.

## If you see any of these error codes on your TV:

711, 721, 722, 724, 725, 726, 727, 731, 732, 733, 734, 736, 741, 747, 751, 752, 763, 764

- Calling DIRECTV at 1-877-389-5372 will be the quickest resolution to these error codes.

If you need further assistance on these or any other questions, please call our [Customer Support line at 801-994-3642](tel:801-994-3642)